


## Fitting/changing gas canister (self-sealing safety gas cartridge):

- Inspect threads/seals of heating torch and gas canister are in place and in good condition.
- Ensure gas regulator (C) is turned OFF.
- Keep gas canister upright and screw clockwise into heating torch until sealed. Do not overtighten. Take care to avoid cross-threading.

### Instructions:

1. Shake gas canister for a few moments.
2. Turn gas regulator control (C) approximately  $\frac{1}{2}$  a turn. Gas should be heard hissing from gas nozzle (A).
3. Keep torch pointed away from yourself, press ignition button (B).
4. Adjust flame by turning gas regulator (C) and flame adjustor (D).
5. To extinguish, turn gas regulator (C) fully clockwise.
6. Disconnect gas canister when not in use. Observe cautions on gas canister label.

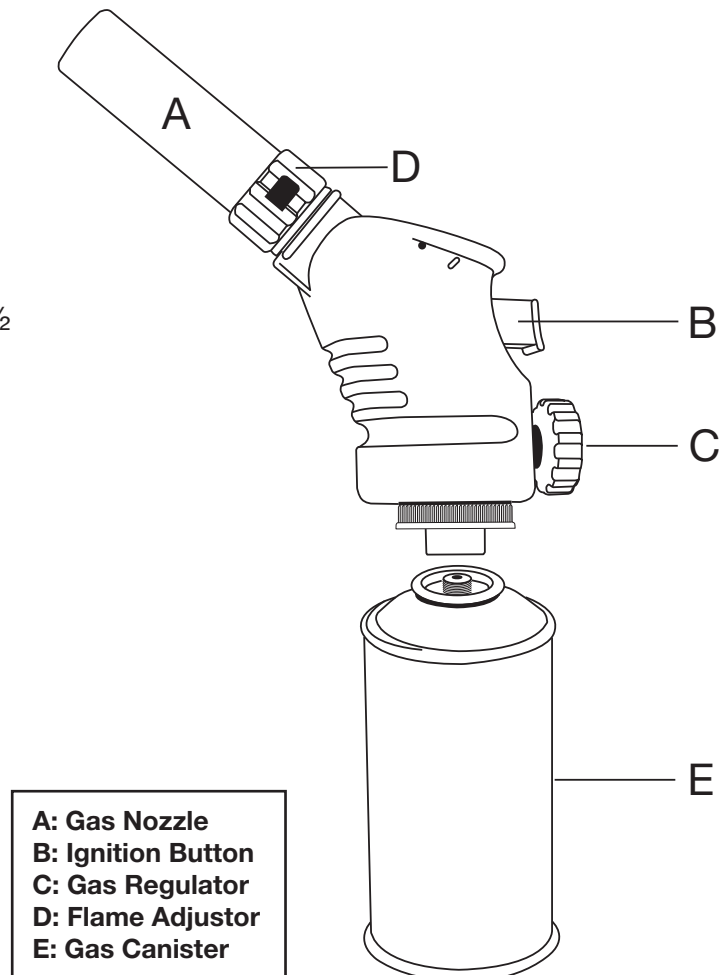

### Care Points:

- Always wear eye or face protection when operating the torch.
- Butane gas is extremely flammable, handle with care.
- DO NOT use the heating torch or gas canister if they have damaged or worn threads/seals.
- DO NOT use the gas torch if it appears damaged, is leaking or is not working correctly.
- If there is a leak (smell of gas) take outside to well ventilated area and do not attempt to use.
- DO NOT puncture the gas canister or dispose of in a fire.
- DO NOT use the torch in any area where paint fumes, solvents or any other flammable liquids or gases pose a potential hazard.
- Keep flammable material away from the torch when using.
- Do not leave the torch unattended if it is in operation.
- Ensure the gas regulator (C) is firmly closed and the flame completely extinguished after use.



**Safety First. Be Protected.**